


LOCKABLE SNAP FRAME

content*

Quantity

■ Allen Key	1
■ Screw + Wall Plug	4


assembly instructions

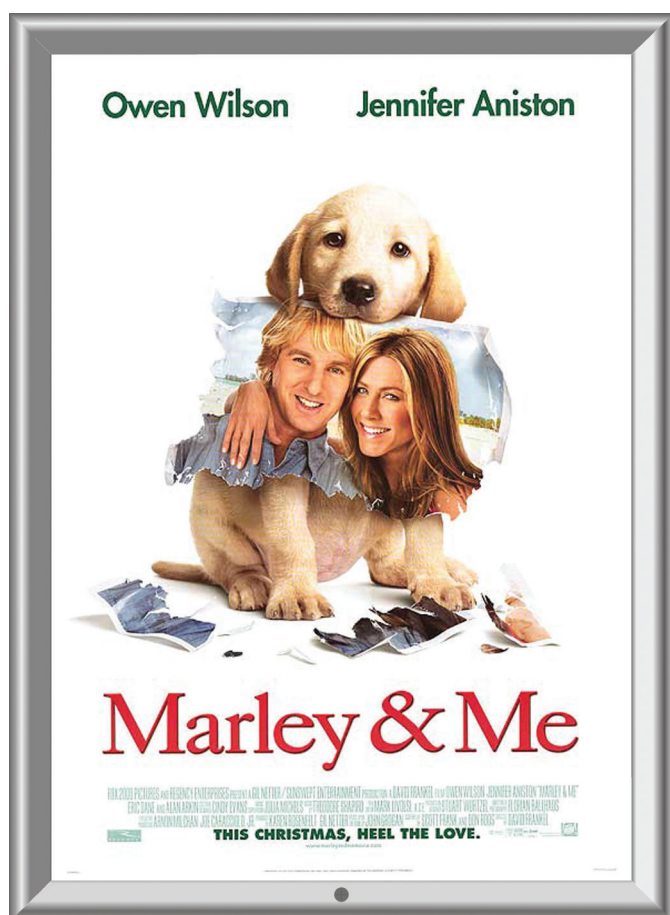


Lock Bolt



*Turn over the LOCK BOLT by allen key.

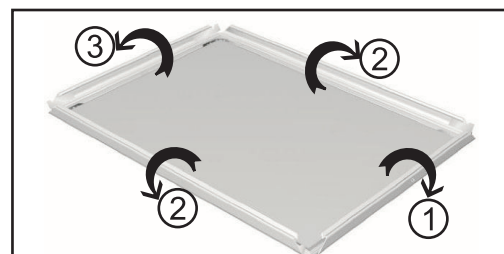


*First, open the locked profile, then the long sides, and last, open the top short profile.

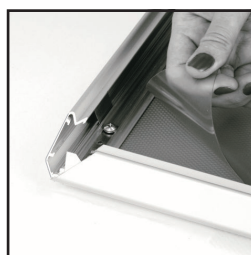

*Take off the cover PVC



*Place the poster
*After placing the cover PVC back on the poster, close the profiles downwards in the order shown above.

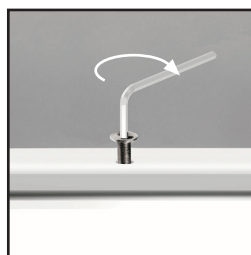

Lock the bolt on bottom profile, using the allen key