


WINDOW FRAME

content*


Quantity

■ Window Profiles	2+2
■ Window Frame	1


assembly instructions

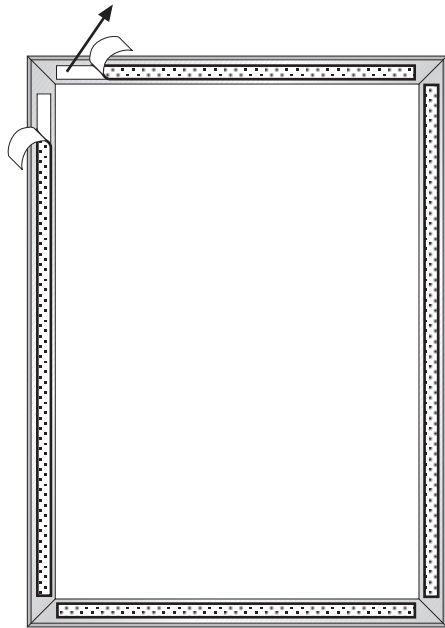


By tearing off the protective sheet on double sided tape, stick the frame on to the window.

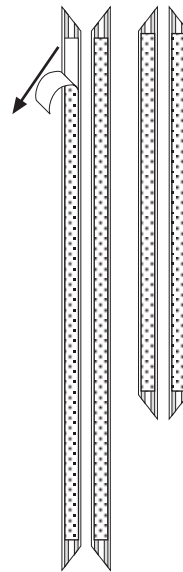

Tear off the protective sheet on double sided tape for the four contre bars

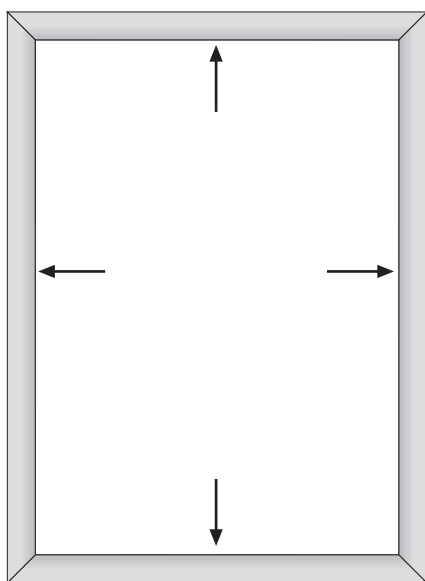

Stick this bars on the opposite side of the window

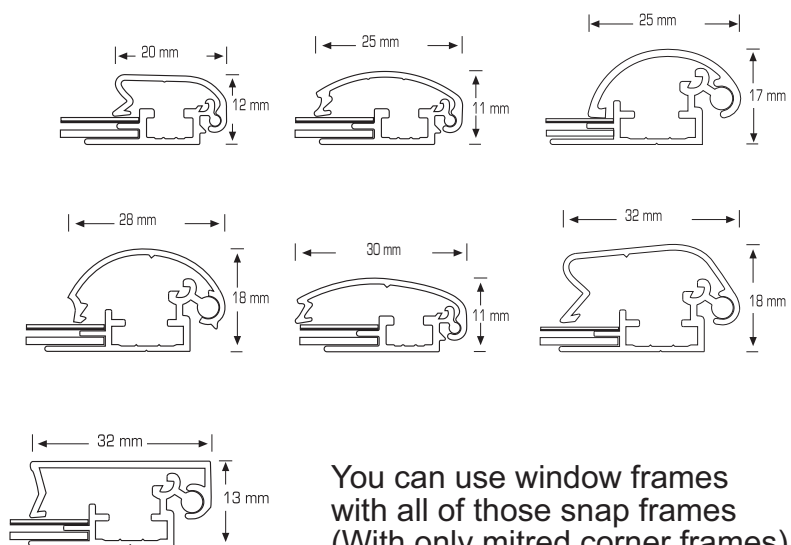

You can use window frames with all of those snap frames (With only mitred corner frames)